

SUPPLEMENT FOR TJ1002


Inserting and Removing microSD cards

The TJ1002 comes with two built-in microSD card slots. One is dedicated to the GPS card for Insane NavEngine, the other one can be used to hold your personal SD card with music, movies, and podcasts.

microSD cards can only be inserted into SD card slots in one direction, but this direction varies across our product line. This supplement is specifically for the TJ1002.

Tweezers or a similar small tool may be helpful in inserting and removing cards.

Important note: To avoid data corruption, please be sure to properly eject any SD card from the Settings before removal. Go to Settings-> Storage and hit the eject icon next to the appropriate card. You are then free to remove the card.

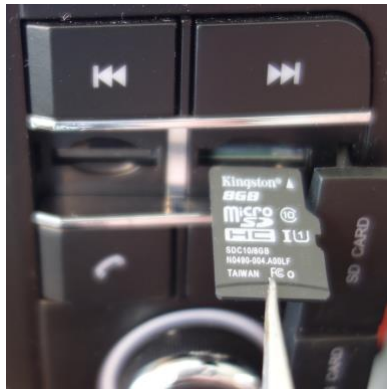

SD CARD

- The SD card slot is on the upper right side of the faceplate
- Align the card with the slot, copper stripes facing down
- Push the card in until it clicks, and then release
- To remove, push the card farther into the slot until it clicks, and then gently release
- **THE CARD SLOT IS SPRING-LOADED, SO RELEASE GENTLY TO AVOID THE CARD FLYING OUT AT HIGH SPEED AND GETTING LOST**



GPS CARD

- The GPS card slot is on the upper left side of the faceplate
- Align the card with the slot, copper stripes facing down
- Push the card in until it clicks, and then release
- To remove, push the card farther into the slot until it clicks, and then gently release
- **THE CARD SLOT IS SPRING-LOADED, SO RELEASE GENTLY TO AVOID THE CARD FLYING OUT AT HIGH SPEED AND GETTING LOST**